

## Product Documentation




Rev. Date <b>Jun-24-2011</b>	Rev. <b>0.1</b>	Document No. <b>SEAG-004</b>
<b>Seagull 5000 BDU Firmware Upgrade Procedure</b>		

<b>DOCUMENT REVISION HISTORY</b>				
<b>Revision</b>	<b>Date</b>	<b>Change description</b>	<b>Author</b>	<b>Remarks</b>
0.1	Jun-24-2011	Draft	Haorong	


<b>Preparation Committee</b>	<b>Reviewer Committee</b>
Haorong Zhu	E.M.L Ekanayake

Rev. Date <b>Jun-24-2011</b>	Rev. <b>0.1</b>	Document No. <b>SEAG-004</b>
<b>Seagull 5000 BDU Firmware Upgrade Procedure</b>		

- 1) Power up the Seagull 5000 Terminal.
- 2) Using a web browser (Internet Explorer, Firefox, etc), open the WebConsole via <http://192.168.0.1>
- 3) The following screen will appear and prompt for username and password.

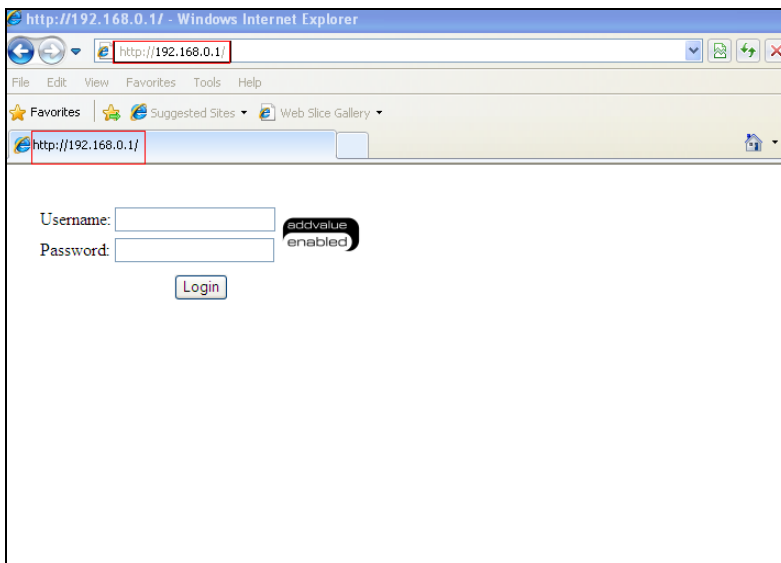

- 4) Fill in both fields and click 'Login' to log on to the WebConsole. (Note: Username and Password will be **admin** by default.)

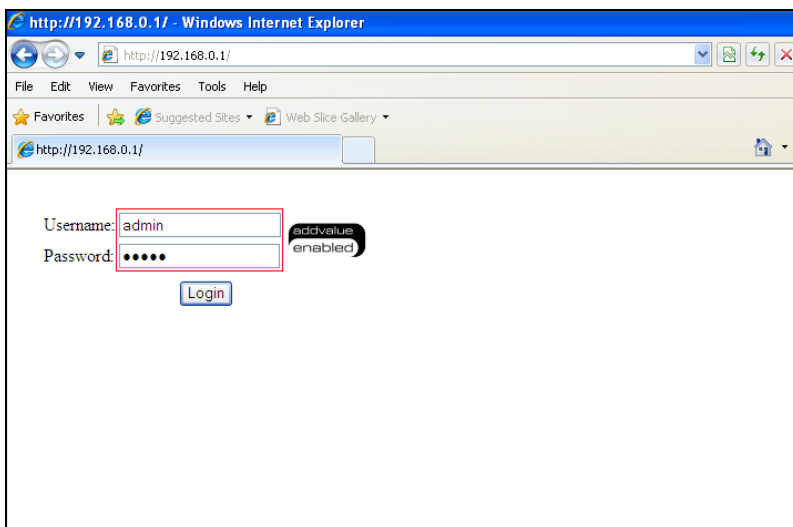

Rev. Date <b>Jun-24-2011</b>	Rev. <b>0.1</b>	Document No. <b>SEAG-004</b>
<b>Seagull 5000 BDU Firmware Upgrade Procedure</b>		

- 5) In the main page,
  - a. Click the [Setting](#) icon as shown below.




- b. Click the [Admin](#) tab.



Rev. Date Jun-24-2011	Rev. 0.1	Document No. SEAG-004
<b>Seagull 5000 BDU Firmware Upgrade Procedure</b>		

c. Click [Firmware Upgrade](#) tab on the left hand side as shown below.

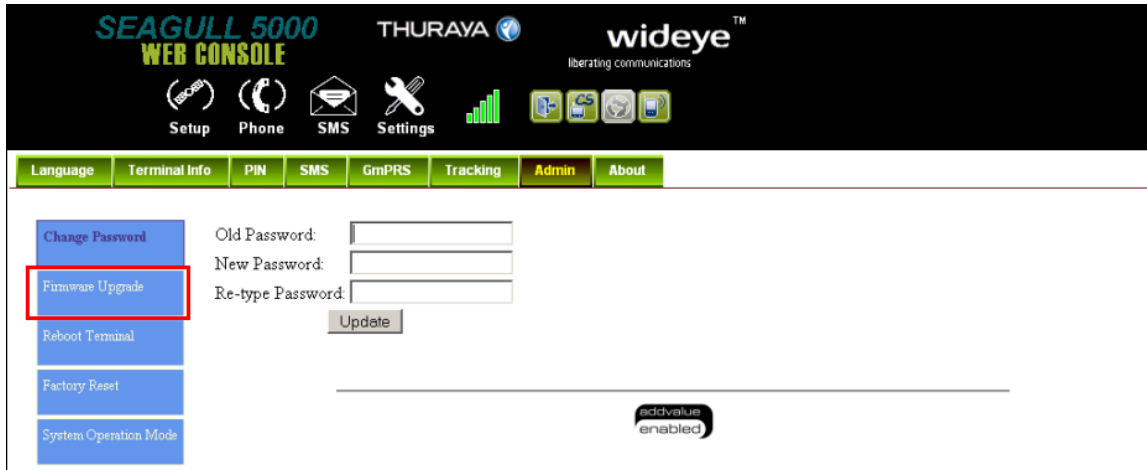


d. The following screen will appear and click the [Browse](#) button to select the new BDU firmware package to be uploaded.




6) Select the new firmware file from a specific folder where the firmware is stored.

Rev. Date Jun-24-2011	Rev. 0.1	Document No. SEAG-004
<b>Seagull 5000 BDU Firmware Upgrade Procedure</b>		

7) Then click the **Upload** button.

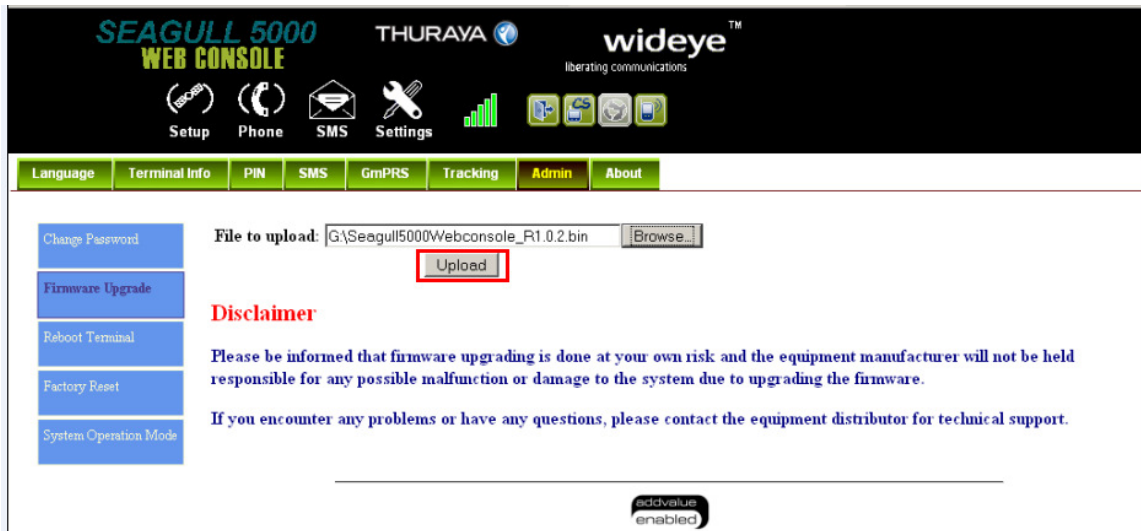


8) The WebConsole will start to upload the file and a small display window opens and shows **Analyzing**. Normally, it will take less than 10 seconds to complete the upgrade.

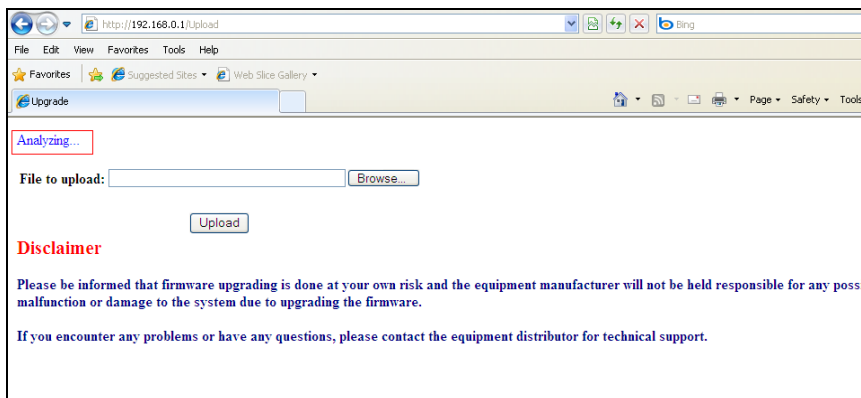

Rev. Date <b>Jun-24-2011</b>	Rev. <b>0.1</b>	Document No. <b>SEAG-004</b>
<b>Seagull 5000 BDU Firmware Upgrade Procedure</b>		

- 9) When the firmware upgrade is completed, the Terminal will reboot automatically and reload the login page. Verify whether the correct firmware is upgraded.

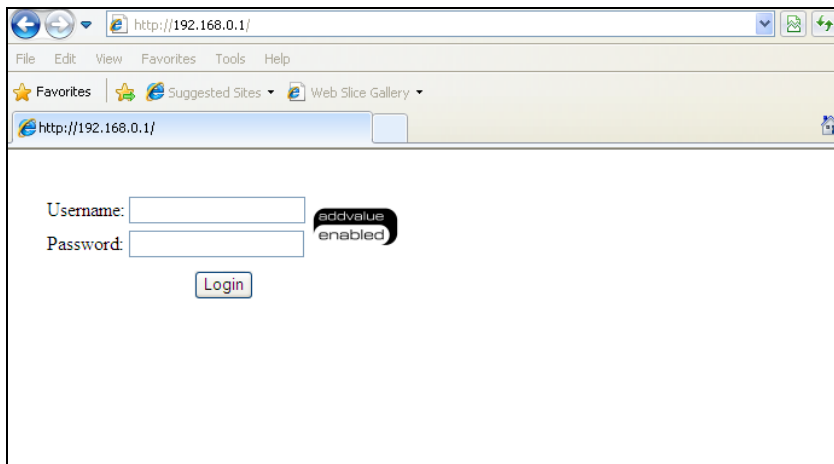

- 10) Seagull 5000 Terminal is ready for use.